Register your product
and get support at
www.philips.com/welcome

SRP2002/10

EN User Manual

PHILIPS

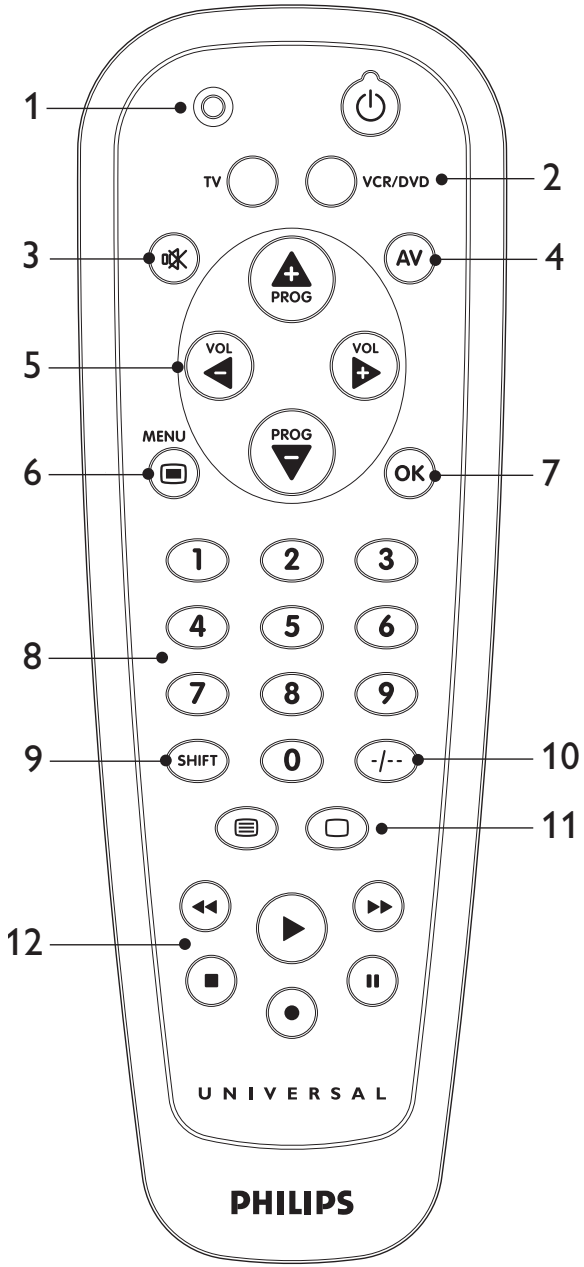

Table of contents

1 Your SRP2002 3

2 Getting started 3-7
- 2.1 Inserting the batteries 3
- 2.2 Setting up the universal remote control 4-7

3 Using the universal remote control 7-9
- 3.1 Buttons and functions 7-8
- 3.2 Resetting a button to its original function 7-9

4 Service and support 10-12
- 4.1 Frequently asked questions 10-11
- 4.2 Need help? 12
  - Helpline 13
  - Brand list 14-23
- Information to the consumer 24
  - Compliance with EMF 24
  - Recycling and disposal 24
  - Battery information 24

1 Your SRP2002

Congratulations on your purchase of the Philips SRP2002 universal remote control. After setting up the remote control you can operate up to 2 different devices with it: TV and VCR/DVD players/recorders (including Blu-ray player).

To fully benefit from the support that Philips offers, register your product at:
www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

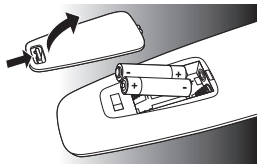

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote control

The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVD player/recorder and VCR) which you want to operate, using the SRP2002.

The remote control can be set up to operate any 2 of the following devices:

Device name	Description
TV	Traditional TV, flat screen TV and projection TV, TV part of TV/VCR, TV/VCR/DVD and TV/DVD combos
DVD	DVD player, Blu-Ray player, High Definition DVD player (HD-DVD), DVD part of TV/DVD, TV/VCR/DVD and VCR/DVD combos
VCR	Video cassette player/recorder, VCR part of TV/VCR, TV/VCR/DVD and VCR/DVD combos

Example: setting up the universal remote control to operate your TV:

1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

2 ***Press and hold*** the TV device selection button ***for 5 seconds*** until the green Setup light ◎ lights up.

- The remote control is now in setup mode.

3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.
A four-digit code is shown for each brand.
Use the digit buttons to enter the code for your brand.

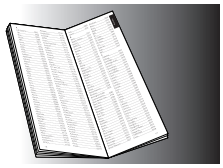

- If the green Setup light ◎ turns off, an invalid code was entered. In this case, try again.

4 Aim the remote control at the TV. ***Press and hold*** the ⏻ button. Release it ***immediately*** as soon as the TV switches off.

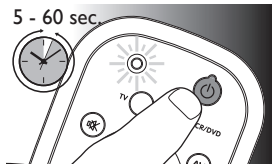

- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

5 **Switch ON** the TV. Try out the buttons that you need for operating it. Try, for example, if the PROG, PROG and digit buttons function properly.

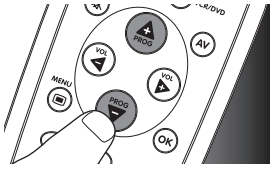

- If a button does not work as expected, ***press and hold*** that button. Release it ***immediately*** as soon as it works. For more information, see chapter **2.2.2**.

6 Press the TV device selection button ***twice*** to finish setup.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

! Important

If you made a mistake:
- Press the device selection button ***twice*** to exit setup. The green Setup light ◎ turns off.
- Restart from the beginning.

- ***If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.***

2.2.1 Setting up the remote control for other devices (DVD player/recorder and VCR)

1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player/recorder or a video cassette in the VCR.

2 Then follow steps **2** to **6** of 'Setting up the remote control for your TV'. Make sure to use the correct device selection button: VCR/DVD.

2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.
In this case you can have the remote control search for alternatives.

Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup

1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
2 Press the button that does not function, keep it pressed and ***immediately*** release it when the device responds. Repeat this for every button that does not function.
- If the button still does not function as expected, try pressing it again for a longer period of time.

After initial setup

1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
2 Select the device you wish to operate (e.g. DVD). Press the VCR/DVD device selection button to select DVD.

3 Keep buttons 1 and 4 ***pressed simultaneously for 5 seconds***.
- The green Setup light ◎ lights up. The remote control is now in setup mode.

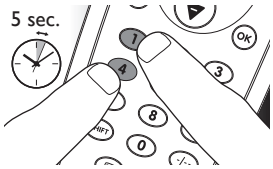

4 ***Press and hold*** the button that does not function and ***immediately*** release it when the device responds.
- If the button still does not function as expected, try pressing it again for a longer period of time.

5 Press the VCR/DVD device selection button ***twice*** to save your settings and exit setup mode.
- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

3 Using the universal remote control

3.1 Buttons and functions

The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.

Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP2002 (e.g. Info/Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP2002.

1 ◎ ..... setup light. Lights up when a remote control command is being sent, when you just selected a device and when the remote control is in setup mode.
⏻ ..... switches the selected device on/off.

Note

For some TV brands/types, the ⏻ button will only switch off the TV. You will have to press a digit button (direct channel selection) to switch on the TV again.

2 TV VCR/DVD ..... device selection buttons. Select the device to be operated.
3 🔇 ..... mutes TV sound.
4 AV ..... switches between external (Audio/Video) inputs of your equipment.

5 PROG ..... previous/next channel.
VOL ..... adjust TV volume.

6 MENU ..... wide screen (TV).

7 OK ..... confirms your selection.

8 1 2 3 ..... digit buttons for direct channel/track selection.
4 5 6
7 8 9
0

9 SHIFT ..... for extra functions. When pressed at the same time as a second key, the second key will get another function.
For example:
SHIFT + MENU ..... menu on/off.
SHIFT + PROG ..... menu up.
SHIFT + PROG ..... menu down.
SHIFT + VOL ..... menu right.
SHIFT + VOL ..... menu left.
Try out other combinations with the SHIFT key on your device in order to find out which functions are available. Only functions featured on the original remote control are available.

10 -/-- ..... selects between one and two-figure channel numbers and channel numbers with more than two or three figures.

11 ..... teletext on ()/off ().

12 ..... rewind.
..... play.
..... fast forward
..... stop.
..... record.
..... pause.

3.2 Resetting a button to its original function

If an improved button (see chapter **2.2.2.**) still does not function as expected, you can always reset the button to its original function.

1 In the current device mode, keep digit buttons 1 and 6 ***pressed simultaneously for 5 seconds***, until the green Setup light ◎ lights up.

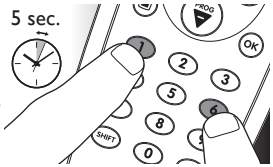

- The remote control is now in setup mode.

2 Press digit buttons 9, 9 and 6, in that order.
- After each button press the green Setup light ◎ blinks once.

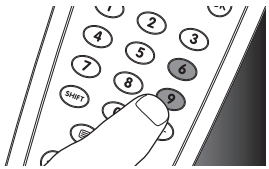

3 Press the button that you wish to reset ***twice***.
E.g. the ⏩ button.
- After each button press the green Setup light ◎ blinks once.

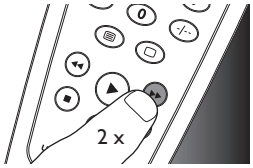

- The green Setup light ◎ will blink one more time to confirm that the button was succesfully reset to its original function.

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.
Battery level too low or battery lifetime came to an end.
- Replace the batteries. See chapter **2.1**.
  After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter **2.2**.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.
The 'Shortlist of brands' only mentions the most common TV, VCR and DVD brands.
- You will find a complete brand list on page 14-23 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV turns OFF in step 4 but does not turn ON again in step 5.
TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter **2.2.2**) instead of switching ON the TV.
- In this case, switch ON the TV manually or use the original remote control for this. Continue with step **6**.
  After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.
- Try improving the button(s). See chapter **2.2.2**.

How do I set the remote control for combo devices (TV/VCR, TV/DVD, DVD/VCR, etc)?
Some combo devices require you to set up two different source selection buttons to control both parts of the combo device. For example, if you have a TV/DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV/DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.
Battery level too low or battery lifetime came to an end.
- Replace the batteries. See chapter **2.1**.
  After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter **2.2**.

The device I want to operate does not respond at all/does not respond to all of the button commands.
- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter **2.2.2**.

Wrong code selected during setup.
- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.
- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.
- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter **2.2.2**.
- Check whether you are using the correct button to switch on Teletext. For TV this is the ⓘ button.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?
No. All user settings will be retained in the remote control memory for 5 minutes.

Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP2002, you can always contact us.

When calling our helpline, make sure to have the SRP2002 at hand when you call, so that our operators can help you determine whether the SRP2002 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP2002/10.

Date of purchase: ...../ ...../ .....
(day/month/year)

For **online support** go to:
www.philips.com/welcome

- Click 'Support' and follow the on-screen instructions.

☎ Helpline

Country	Phone number	Tariff
Ireland	01 601 1158	pstn
United Kingdom	0800 331 6015	free

A
4Kus....0005
A.R. Systems....0012
Acme....3521
Acura....0036
ADA....0038
ADC....0040
Addison....0043
Adelsound....0044
Admiral....0046
Adyson....0058
AEG....0059
Agashi....0063
Agazi....3522
AGB....0064
Aiko....0069
Aim....0070
Airis....0071
Aiwa....0072
Akai....0074
Akiba....0078
Akito....0082
Akura....0083
Alaron....0085
Alba....0086
Alcyon....0093
Alize....0100
Alkos....3523
Allorgan....0105
Allstar....0108
Ambassador....0120
Amitech....0130
Amoi....0132
AMOi....0132
Amplivision....0138
Amstrad....0140
AMW....0143
Anam....0146
Anam National....0147
Anglo....0151
Anitech....0154
Ansonic....0156
AOC....0165
Apex....3691
Apollo....0171
Arc En Ciel....0178
Arcam....0179
Arcam Delta....3524
Ardem....0184
Aristona....0192
Arthur Martin....0200
ASA....0202
Asberg....0205
Asono....0212
Astra....0221
Asuka....0227
ATACOM....0228
Atlantic....0233
Atori....0237
Auchan....0240
Audiosonic....0264
Audioton....0266
AudioTon....0266
Ausind....0276
Autovox....0280
Avious....0291
Awa....0296
Ayomi....3525

B
Baird....0311
Bang & Olufsen....0314
BARON....3959
Basic Line....0325
Bastide....0327
Baur....0331
Baze....0334
Bazin....0335
BBK....0337
Beijing....0345
Beko....0346
Bellagio....0354
BenQ....0359
Beon....0361
Best....0364
Best Buy....0365
Bestar....0368
Bestar-Daewoo....0369
Binatone....0378
Black Panther Line....4196
Black Star....0386
Blacktron....3526
Blackway....0388
Blaupunkt....0390
Blue Sky....0395
Blue Star....0396
Boghe....0400
Bondstec....0403
Boots....0405
BPL....0413
Brainwave....0415
Brandt....0416
Brinkmann....0423
Brionvega....0424
Britannia....0425
Bruns....0435
BskyB....0436
BSR....0437
BTC....0439
Bush....0445

C
Caihong....0462
Cambridge Audio....0470
Cameron....4032
Capsonic....0486
Carad....0488
Carena....0489
Carrefour....0492
Cascade....0496
Casio....0499
CAT....0500
Catha....4094
Cathay....0501
Catron....0502
CCE....0504
Celestial....0511
Centrex....0516
Centrum....0519
Centurion....0520
Century....0521
CGE....0523
CGV....0524
Changcheng....0526
Changfei....0527
Changhai....0529
Changhong....0530
Chimei....3563
Chuangjia....4096
Chunfeng....0546
Chung Hsin....0547
Chunsun....0549
Cimline....0552
Cinetec....0560
CineVision....0562
City....0569
Clarivox....0576
Classic....0580
Clatronic....0581
CMS....0590
CMS Hightec....0591
Coby....0597
Concorde....0626
Condor....0627
Conia....0628
Conrowa....0634
Contec....0635
Continental Edison....0637
Cosmel....0647
Crosley....0655
Crown....0658
CS Electronics....0663
CTC....0664
CTC Clatronic....3527
C-Tech....0449
CVG....3996
CyberHome....0672
Cybertron....0675

D
Daenyx....0690
Daewoo....0692
Dainichi....0694
Dansai....0699
Dantax....0702
Datron....4201
Datsura....0703
Dawa....0707
Daytek....0708
Dayton....0709
Daytron....0710
De Graaf....0716
DEC....0717
Decca....0718
Deitron....0722
Denko....0730
Denon....0731
Denver....0733
Denzel....0734
Desay....0737
Desmet....0738
Diamant....0746
Diamond....0747
Digatron....0751
Digiline....0759
Digitor....0781

Dixi....0807
DK Digital....0808
Dmtech....0813
Dongda....0820
Donghai....0821
Drean....0832
DTS....0837
Dual....0838
Dual-Tec....3528
Dumont....0840
Duongjie....4101
Dux....0843
D-Vision....0684
DVX....0847
Dynatron....0855
Dynex....3476

E

Easy Home....3700
Eclipse....0867
E-Dem....3624
Elbe....0880
Elbe-Sharp....3529
Elcatech....0882
Elcit....0883
Electa....3530
ELECTRO TECH....3531
Electrohome....0890
Elektra....0896
Element....3477
ELG....0900
Elin....0902
Elite....0903
Elman....0907
Elsay....0909
Elta....0910
Emerson....0917
Emperor....0921
Enzer....0934
Epson....0937
Erres....0942
ESC....0945
Etron....0949
Etzuko....4203
Eurofeel....0954
EuroLine....0955
Euroman....0956
Europa....0957
Europhon....0959
Expert....0976
Exquisit....0978

F

Fagor Life....4102
Feilang....0990
Feilu....0991
Feiyue....0993
Fenmenti....4103
Fenner....0994
Ferguson....0996
Fidelity....0998
Filsai....1000
Finlandia....1003
Finlux....1004
Fintec....1006
Firstline....1008
Fisher....1009
Flint....1014
FNR....1016
Formenti....1023
Formenti/Phoenix....3532
Formenti-Phoenix....1024
Fortress....1027
Fraba....1030
Friac....1040
Frontech....1042
Fujitsu....1052
Fujitsu General....1053
Funai....1056

G

Galaxi....1068
Galaxis....1069
GBC....1078
Geant Casino....1082
GEC....1083
Geloso....1087
General....1090
General Technic....1095
Genexxa....1097
Gericom....1103
GFM....3820
Giant....1113
Giec....1115
Global Solutions....1120
Global Sphere....1121
Go Video....1126
GoldHand....1136
Goldline....1138
GoldStar....1140
Goodmans....1142
Gorenje....1144
GPM....1149
Gradiente....1151
Graetz....1152
Granada....1154
Grandin....1156
Great Wall....4105
Gronic....1160
Grundig....1162
Grunkel....1164
GVG....1169

H

H&B....3635
Haaz....1172
Haier....1175
Haihong....1176
Halifax....1179
Hampton....1183
Hanseatic....1190
Hantarex....1192
Hantor....1193
Harman/Kardon....1198
Harwood....1204
Hauppauge....1206
HCM....1210
Hema....1222
Hemmermann....1223
Hifivox....1233
Higashi....1234
Highline....1236
Hikona....1237
HiLine....3533
HiMAX....1241
Hinari....1243
Hisawa....1247
Hisense....1249
Hitachi....1251
Hitachi Fujian....1252
Hitsu....1257
Hoeher....1262
Home Tech Industries....1266
Hongmei....1272
Hornyphon....1277
Hoshai....1278
Huafa....1287
Huanghaimei....1288
Huanghe....1289
Huanglong....1290
Huangshan....1291
Huanyu....1292
Huari....1294
Huijiaban....4108
Humax....1298
Hygashi....1308
Hyper....1309
Hypson....1312
Hyundai....1315

I

Iberia....1320
ICE....1324
ICeS....1325
Impego....4207
Imperial....1346
Indesit....1349
Indiana....1350
Ingelen....1354
Ingersol....1355
Inno Hit....1358
Innovation....1360
Interactive....3534
Interbuy....1376
Interfunk....1377
Internal....1379
International....1380
Intervision....1386
IR....4110
Irradio....1396
Isukai....1402
ITC....1404
ITS....1405
ITT....1406
ITV....1408

J

JEC....1426
Jiahua....1435
Jinhai....1439
Jinxing....1442
JVC....1464

K

Kaisui 1471
Kamosonic 3535
Kamp 1475
Kangchong 1476
Kanghua 1477
Kangwei 4115
Kansai 1480
Kapsch 1483
Karcher 1484
Kawa 1487
Kawasho 1489
Kendo 1500
Kennedy 1504
Kennex 1505
Kenwood 1507
KeyPlug 3646
KIC 1512
Kiiro 1513
Kingavon 1519
Kingsley 1520
Kiota 1522
Kiss 1524
Kiton 1525
Kneissel 1535
Koda 1539
Kolin 1541
Kolster 1543
Konig 1547
Konka 1548
Korpel 1552
Korting 1554
Kosmos 1557
Koyoda 1561
KTV 1572
Kuro 1579
KXD 1581
Kyoshu 1583
Kyoto 1585

L

L&S Electronic 1588
Lafayette 1591
LaSAT 1597
Lawson 1603
Layco 4117
Lecson 1606
Lenco 1615
Lenoir 1617
Lesa 1622
Leyco 1627
LG 1628
LG/Goldstar 3536
Liesenk 3537
Liesenk & Tter 1630
Liesenkotter 1631
Life 3538
Lifetec 1633
Limit 1637
Liteon 1645
Lloyds 3539
Lloyd's 1648
Local India TV 1653
Loewe 1660
Loewe Opta 3540
LogicLab 3650
Logik 1661
Luma 1674
Lumatron 1676
Lux May 1680
Luxor 1683

M

M Electronic 1688
Madison 1698
Magnadyne 1702
Magnafon 1703
Magnavox 1706
Magnex 1707
Magnum 1709
Majestic 1713
Mandor 1717
Manesth 1718
Manhattan 1719
Marantz 1724
Marelli 1729
Mark 1731
Marquant 1734
Masuda 1744
Matsui 1750
Matsushita 1751
McMichael 1768
Mecotek 1776
Mediator 1784
Mediencom 1786
Medion 1787
Medison 1788
Melectronic 3654
M-Electronic 3541
Melvox 1799
Memorex 1800
Memphis 1802
Mercury 1804
Metz 1810
MiCO 1813
Micromaxx 1822
Micromedia 1823
Micromega 1824
Microstar 1827
Migros 1832
Minato 1835
Minerva 1838
Minoka 1840
Minowa 1843
Mitsubishi 1855
Mivar 1857
Mizuda 1860
Monyka 1873
Morgans 3970
Motion 1877
MTC 1889
MTEC 1890
MTlogic 1892
Mudan 1896
Multi System 3542
Multistandard 1904
Multisystem 4121
Multitec 1906
Multitech 1907
Murphy 1911
Musikland 1915
Mustek 1916
Mx Onda 1919
Mystral 1925

N

NAD 1926
Naiko 1930
Nakamichi 1932
Nakimura 1933
Naonis 1936
National 1942
NEC 1950
Neckermann 1951
NEI 1952
Nesco 1960
Netsat 1966
Network 1968
Neufunk 1970
Nevir 1977
New Tech 1979
New World 1980
Next Base 1983
Nicamagic 1994
Nikkai 1998
Noblex 2013
Nobliko 2014
Nogamatic 2016
Nokia 2017
Nordic 2021
Nordmende 2022
Nordvision 3543
Normerel 2024
Novatronic 2035
NU-TEC 2048

O

Oceanic 2061
Okana 4122
Okano 2065
Omni 2074
ONCEAS 3544
Onida 2081
Onimax 2082
Onkyo 2085
Onwa 2087
Oopla 2088
Opera 2090
Optim 2094
Orava 2101
Orbit 2103
Orion 2111
Oritron 2112
Orline 2113
Ormond 2114
Orson 2115
Orsowe 2116
Osaki 2118
Osio 2121
Oso 2122
Osume 2123
Otto Versand 2126
Oulin 4123

P
P&B 2132
Pacific 2135
Pael 2140
Palladium 2145
Palsonic 2147
Panama 2149
Panasonic 2153
Panavision 2154
Panda 2155
Pathe Cinema 2168
Pathe Marconi 2169
Pausa 2171
peeKTON 2178
Pensonic 3778
Perdio 2185
Perfekt 2186
Philco 2192
Philharmonic 2194
Philips 2195
Philips Magnavox 3715
Phoenix 2199
Phonola 2201
Phonotrend 2202
Pioneer 2212
Pionier 2213
Plantron 2219
Playsonic 2224
Pointer 2229
Polaroid 2230
Poppy 2236
Portland 2238
Powerpoint 2241
Prandoni Prince 4125
Prandoni-Prince 2242
Precision 2244
Prima 2253
Prinz 2260
Profekt 4126
Profex 2269
Profilo 2272
Profitronic 2273
Profi-Tronic 3545
Proline 2274
Promax 2275
Prosonic 2282
Protech 2284
ProVision 2291
Provision 2291
Pye 2302
Pymi 2304

Q
Quandra Vision 3546
Quasar 2320
Quelle 2322
Questa 2324

R
Radialva 2329
Radio 4128
Radio Shack 3547
Radiola 2330
Radiomarelli 2331
Radionette 2332
RadioShack 2333
Radiotone 2334
Raite 2340
Rank 2345
RBM 2350
RCA 2351
REC 2357
Recor 2359
Rectiligne 2362
Rediffusion 2364
Redstar 2366
RedStar 2366
Reflex 2368
Reoc 2379
Revox 2383
Revoy 2384
Rex 2385
RFT 2386
Rhapsody 2387
Rimax 2391
R-Line 2327
Roadstar 2398
Robotron 2401
Ronin 2412
Rowa 2416
Rownsonic 2417
Royal 2419
Royal Lux 2420
RTF 3548

S
Saba 2429
Sabaki 2430
Sagem 2434
Saisho 2437
Saivod 2439
Salora 2443
Sambers 2445
Sampo 2446
Samsung 2448
Samurai 2451
Sandra 2454
Sansui 2458
Sanwa 2461
Sanyo 2462
Sanyuan 2464
Saville 2491
SBR 2492
ScanMagic 2496
Schaub Lorenz 2500
Schneider 2501
Scientific Labs 2504
Scott 2508
Seeltech 2519
SEG 2522
SEI 2524
Sei-Sinudyne 2525
SEI-Sinudyne 2525
Seleco 2528
Sencora 2531
Sentra 2534
Sentron 4216
Serino 2539
Shanghai 2547
Shanshui 4133
Shaofeng 2549
Sharp 2550
Shencai 2553
ShengCai 4217
Shenyang 2555
Sherwood 2557
Shintom 2563
Shintoshi 2564
Shivaki 2567
Shorai 2569
Siam 2572
Siarem 2573
Siemens 2574
Siera 2576
Sierra 3549
Siesta 2577
Sigmatek 2580
Silva 2591
Silva Schneider 2592
Silver 2594
Singer 2599
Sinudyne 2601
Skantic 2605
SKY 2610
Skymaster 2621
Skyworth 2631
Slim Art 2636
SM Electronic 2639
Sogera 2649
Solavox 2654
Sonawa 2663
Songdian 4136
Soniko 2669
Sonitron 2671
Sonneclair 2673
Sonoko 2675
Sonolor 2676
Sontec 2677
Sontech 3435
Sony 2679
Sound & Vision 2680
Soundmaster 2685
Soundmax 2687
Soundwave 2689
Spectra 2697
Srypton 4138
Standard 2713
Star Cluster 3724
Starlight 2727
Starlite 2728
Starmedia 2730
Stenway 2739
Stern 2741
Strato 2745
Stylandia 2752
Sunkai 2762
Sunstar 2768
Suntronic 2770
Sunwood 2772
Superla 2782
Supersonic 2787
SuperTech 2789
Supervision 2791

Supra 2792
Susumu 2797
Sutron 2798
Sydney 2808
Sylvania 2809
Symphonic 2810
Synn 2813
Sysline 2815
Sytong 2820

T
T.D.E. Systems 2822
Tactus 2825
Taishan 2835
Taisho 2836
Tandberg 2842
Tandy 2843
Tashiko 2850
Tatung 2852
TCL 2856
TCM 2857
Teac 2860
Teachimagen 4140
Tec 2861
Tech Line 2863
Techica 2865
Technema 2866
Technics 2869
Technika 2870
TechniSat 2873
Tedelex 2889
Teleavia 2901
Telecor 2910
Telefunken 2914
Telefusion 2915
Telegazi 2917
Telemeister 2924
Telesonic 2930
Telestar 2931
Teletech 2934
Teleton 2935
Televideon 2938
Televiev 2939
Televiso 2941
Temco 2946
Tennessee 2952
Tenosal 2953
Tensai 2954
Tenson 2955
Tesmet 3550
Tevion 2962
Texet 2963
Thomson 2972
Thorn 2974
Tiankeban 4142
Tobo 2999
Tokai 3001
Tokyo 3004
Tomashi 3006
Tonsai 4223
Top Suxess 3013
Toshiba 3021
Towada 3028
Towika 4224
Toyoda 3030
Trakton 3036
Trans Continens 3037
TRANS-continents 3039
Transfec 4143
Transonic 3041
Transtec 3042
Trident 3054
Trio 3056
Tristar 3057
Triumph 3058
TruVision 3061
TSM 3065
TVA 4225

U
Uher 3089
Ultravox 3095
Umax 3098
Unic Line 3100
Union 3781
United 3106
United Quick Star 4226
Universal 3113
Universum 3115
Univox 3116

V
Vestel 3148
Vexa 3149
Vibrant 3154
Victor 3155
Videologic 3165
Videologique 3166
Videon 4227
Videosat 3170
VideoSystem 3172
Videotechnic 3173
Videoton 3174
Viewmaster 3182
Viewsonic 3186
Visiola 3197
Vision 3198
Vistar 3207
Vortec 3217
Voxson 3220

W
Waitec 3227
Waltham 3230
Watson 3233
Watt Radio 3234
Wega 3238
Wegavox 3239
Welltech 3244
Weltblick 3245
Weston 3251
Wharfedale 3255
White Westinghouse 3258
Windstar 3266
Woxter 3286

X
Xbox 3295
Xiahua 3299
Xiangyu 3302
Xingfu 3305
Xinghai 3306
Xinrisong 3308
Xlogic 3310
XMS 3312
Xoro 3315
Xrypton 3317
Xuelian 3320

Y
Yakumo 3324
Yamada 3325
Yamaha 3326
Yamakawa 3327
Yamishi 3328
Yokan 3335
Yoko 3336
Yorx 3340
Yuhang 3345
Yukai 3346

Z
Zanussi 3349
Zenith 3356
ZhuHai 3364

EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.
One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.

© 2010 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5355 1

November 2010

www.philips.com

RTP/4510